


Spare parts list BTPC70H

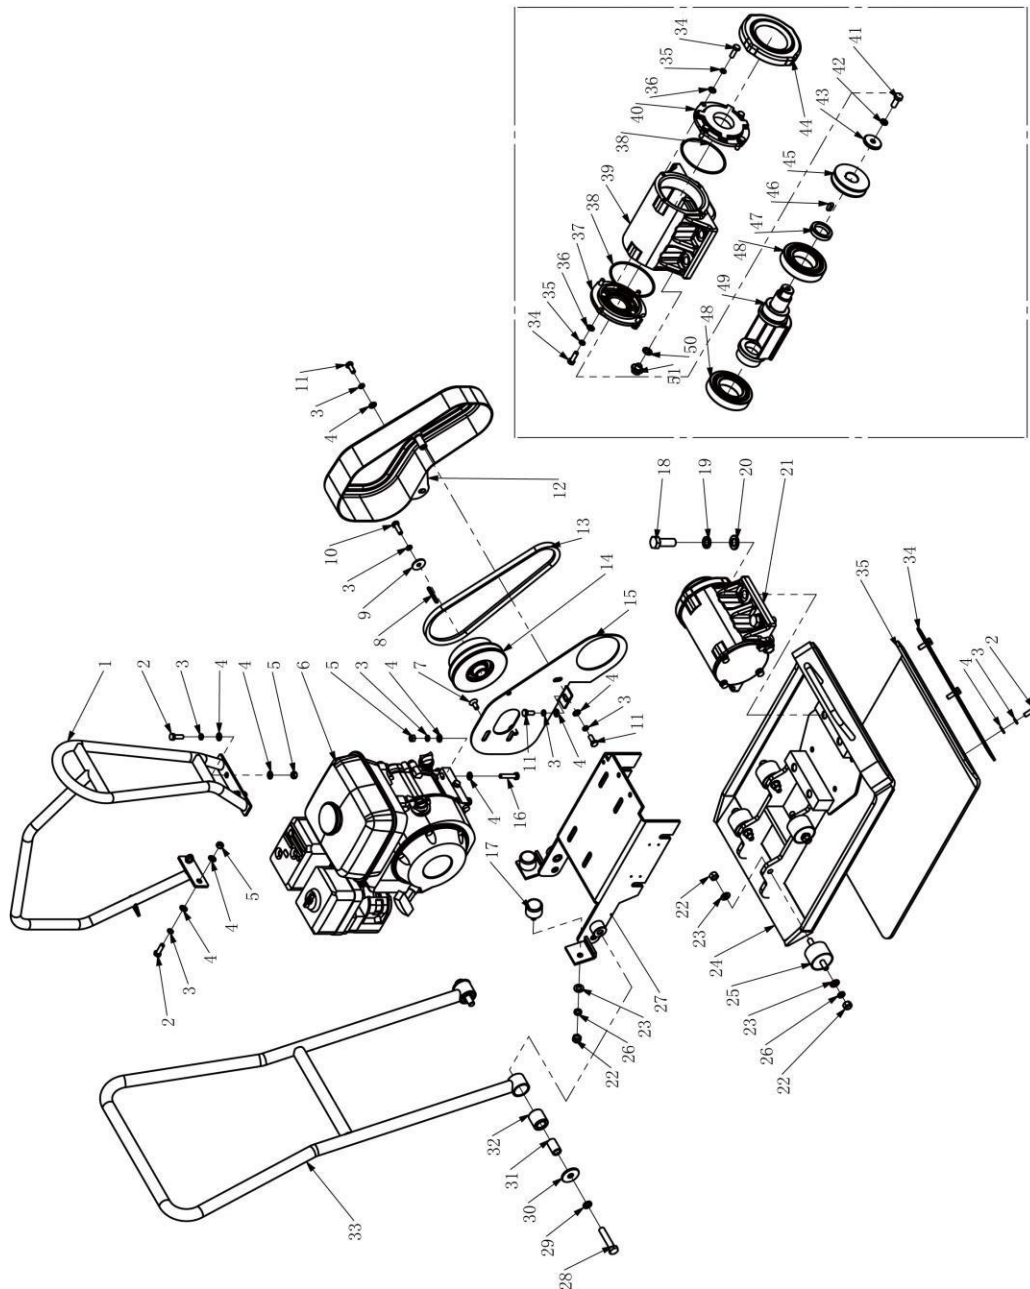

MAIN

No.	Description	Drawing No.	Qty
1	Frame	2202-10000-1	1
2	Bolt M8	15080250	7
3	Washer M8	12080000	15
4	Washer M8	11080000	22
5	Lock Nut M8	13080001	8
6	Engine	25160005	1
7	Allen Screw	16082004Y	2
8	Key	20000000	1
9	Washer M8	11083003	1
10	Bolt 5/16	15080300Y	1
11	Bolt M8	15080200	3
12	Belt Cover	2202-05000-4	1
13	Belt	27AV13X904La	1
14	Clutch Assy.	2302-10100-1	1
15	Belt Cover Plate	2202-00009-2	1
16	Bolt M8	15080400	4
17	Shock Absorber	2202-00004-4	2
18	Bolt M16	15160450	4
19	Spring Washer M16	12160000	4
20	Washer M16	11160000	4
21	Viberating Case Assy.	2204-05000-1	1
22	Lock Nut M10	13100001	10
23	Washer M10	11100000	10
24	Viberating Plate	2206-01000-3	1
25	Shock Absorber	2202-00002-4	4
26	Spring Washer M10	12100000	6
27	Engine Base	2202-07000-3	1
28	Bolt M12	15120601	2
29	Spring Washer M12	12120000	2



Beton Trowel Bv

No.	Description	Drawing No.	Qty
30	Washer M12	11124003	2
31	Bushing	2202-00001-1	2
32	Rubber Bushing	2202-00003-4	2
33	Handle	2205-08000-3	1
34	Plate, Rubber Mat	2206-00001-2	1
35	Rubber Mat	2206-02001-1	1
36	Bolt M8	15080250	8
37	Washer M8	12080000	8
38	Washer M8	11080000	8
39	Left Cover	2202-20005-1	1
40	O-Ring	261053.1	2
41	Viberating Case	2202-20002-1	1
42	Right Cover	2202-20006-1	1
43	Bolt M10	15100250	1
44	Spring Washer M10	12100000	1
45	Washer M10	11104005	1
46	Dust Cover	2202-20004-4	1
47	Pulley	2202-20003-1	1
48	Key	20080719A	1
49	Oil Sealing	2535481002	1
50	Bearing	216211C3P6	2
51	Rotator	2204-05001-4	1